



User Manual

SY-620

1.1" DIGITAL PHOTO FRAME

Introduction

Thank you for purchasing this Keychain Digital Photo Frame. Please read this manual carefully FIRST in order to get the most out of your device.

What your Digital Photo Frame includes:

- Photo Frame
- USB cable
- User's Manual

Computer System Requirements for Windows

To be able to download photos to your PC you will need the following minimum configuration:

- Windows XP/Vista (NOT Compatible with Mac)
- Pentium-based PC (or equivalent)
- 150 MB hard disk free space and 128 MB or more RAM
- Available USB Interface
- Color display (16 bit or higher recommended)
- Screen resolution 1024 X 768

A Quick Look at Your Device



- 1. LCD screen
- 2. **Power/Menu** button
- 3. **Page Up** button
- 4. **Page Down** button
- 5. USB port

Preparing Your Device for Use

To charge battery for your photo frame

Your device has a built-in lithium battery. A red battery icon



will flicker on the LCD screen when your Photo Frame battery is running low. After 10 seconds, your Photo Frame will automatically turn off. You can recharge your lithium battery by connecting your photo frame to the computer with the USB cable.

Starting Your Digital Photo Frame

Power on Your Photo Frame:

Press and hold the **Power/Menu** button for about 3 seconds to power on your Digital Photo Frame.

Note:

Please make sure that your Photo Frame has sufficient battery power in order to operate properly.

Power Off Your Photo Frame

When your Photo Frame is turned on, press and hold the **Power/Menu** button for about 3 seconds. On your LCD screen,

the message “Power Off” will appear, and your Photo Frame will power off.

Viewing Different Photos On Your Photo Frame

If multiple photos are loaded on your Photo Frame, you can press the **Page Up** or **Page Down** buttons to view different photos on your LCD screen.

Exploring the Settings Options

To change or adjust any of the settings options for your Photo Frame, first power on your Photo Frame, and then press the **Power/Menu** button. On your LCD screen, you will see the heading “Main Menu”, followed by a list of settings that can be adjusted on your Photo Frame. Use the **Page Up** button or **Page Down** button to scroll through the list of settings options. When the setting you wish to adjust is highlighted, press the **Power/Menu** button to make adjustments. Your Photo Frame features the following settings which can be adjusted:

Main Menu

USB Connect

Slide Show

AUTO Off

LCD Contrast

Backlight

Display Clock

Set Clock

Delete One

Delete All

Exit

1. USB CONNECT

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until USB CONNECT is highlighted.
- C. Press the **Power/Menu** button to make adjustments to the USB CONNECT setting.

USB CONNECT SETTINGS

YES: When YES is selected, you can connect your Photo Frame to your computer in order to load photos on to your Photo Frame.

NO: When NO is selected, your computer will not recognize your Photo Frame and you will not be able to load photos from your computer.

You can use the **Page Up** or **Page Down** buttons to highlight YES or NO. You can press the **Power/Menu** to enter this setting.

NOTE: The USB CONNECT option must be set to YES in order to load photos from your computer onto your photo frame.

2. SLIDE SHOW

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until SLIDE SHOW is highlighted.
- C. Press the **Power/Menu** button to make adjustments to the SLIDE SHOW setting.

SLIDE SHOW SETTINGS

The SLIDE SHOW SETTINGS allow you to choose the number of seconds that each of your photos will be displayed. You can choose anywhere between 0-15 seconds. Press the **Page Up** button repeatedly to toggle through the amount of seconds you'd like to select, and press the **Power/Menu** button to enter the setting.

NOTE: By selecting 0 seconds, you will turn the slide show off. Your Photo Frame will only display one photo without periodically switching to others.

3. AUTO OFF

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until AUTO OFF is highlighted.
- C. Press the **Power/Menu** button to make adjustments to the AUTO OFF setting.

AUTO OFF SETTINGS

The AUTO OFF SETTINGS allow you to choose the number of minutes until your Photo Frame automatically shuts off in order to save battery power. You can choose anywhere between 0-30 minutes. Press the **Page Up** button repeatedly to toggle through the amount of minutes you'd like to select, and press the **Power/Menu** button to enter the setting.

NOTE: By selecting 0 seconds, your Photo Frame will not automatically turn off automatically. To turn it off, you will have to manually turn off your Photo Frame.

4. LCD CONTRAST

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until LCD CONTRAST is highlighted.

C. Press the **Power/Menu** button to make adjustments to the LCD CONTRAST setting.

LCD CONTRAST SETTING

The LCD CONTRAST SETTINGS allow you to adjust the amount of contrast shown on your LCD screen. You can choose anywhere between levels 1 (low contrast) and 6 (high contrast). Press the **Page Up** button repeatedly to toggle through the amount of contrast you'd like to select, and press the **Power/Menu** button to enter the setting.

5. BACKLIGHT

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until BACKLIGHT is highlighted.
- C. Press the **Power/Menu** button to make adjustments to the BACKLIGHT setting.

BACKLIGHT SETTING

The BACKLIGHT SETTINGS allow you to adjust the strength of backlighting on your LCD screen. You can choose anywhere between levels 1 (very dark) and 21 (very bright). Press the **Page Up** button repeatedly to toggle through the amount of backlight you'd like to select, and press the **Power/Menu** button to enter the setting.

6. DISPLAY CLOCK

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until DISPLAY CLOCK is highlighted.
- C. Press the **Power/Menu** button to turn on the DISPLAY CLOCK.

By choosing the DISPLAY CLOCK option, your Photo Frame will display the date, time and day of the week instead of showing photos stored on your Photo Frame. By pressing the **Power/Menu** button, you can go back to showing stored photos.

7. SET CLOCK

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until SET CLOCK is highlighted.
- C. Press the **Power/Menu** button to make adjustments to the CLOCK setting.

SET CLOCK SETTING

The SET CLOCK SETTING allows you to adjust the Display Clock so that it displays accurate time and date information. To do so, press the **Page Up** button or **Page Down** button to choose the correct date or time setting, and press the **Power/Menu** button to enter these settings.

8. DELETE ONE

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until DELETE ONE is highlighted.
- C. Press the **Power/Menu** button to make adjustments to the DELETE ONE setting.

DELETE ONE SETTINGS

YES: When YES is selected, the last photo that has been loaded on your Photo Frame will be deleted.

NO: When NO is selected, the last photo that has been loaded on your Photo Frame will not be deleted.

You can use the **Page Up** or **Page Down** buttons to highlight YES or NO. You can press the **Power/Menu** to enter this setting.

9. DELETE ALL

A. Press the **Power/Menu** button once.

B. Press the **Page Up** or **Page Down** button repeatedly until DELETE ALL is highlighted.

C. Press the **Power/Menu** button to make adjustments to the DELETE ALL setting.

DELETE ALL SETTINGS

YES: When YES is selected, all photos that have been loaded on your Photo Frame will be deleted.

NO: When NO is selected, all photos that have been loaded on your Photo Frame will not be deleted.

You can use the **Page Up** or **Page Down** buttons to highlight YES or NO. You can press the **Power/Menu** to enter this setting.

10. EXIT

- A. Press the **Power/Menu** button once.
- B. Press the **Page Up** or **Page Down** button repeatedly until EXIT is highlighted.
- C. Press the **Power/Menu** button to EXIT the settings option menu.

LOADING PHOTOS FROM YOUR COMPUTER ONTO YOUR PHOTO FRAME

In order to load photos from your computer, simply connect your Photo Frame to your computer by inserting one end of the included USB connection cable to the USB port on your Photo Frame, and the other end to an available USB port on your computer. Make sure that you have the USB Connect setting on your Photo Frame selected. To do so, follow the steps below:

USB CONNECT

- A. Press the **Power/Menu** button once so that the Main Menu appears on your Photo Frame.
- B. Press the **Page Up** or **Page Down** button repeatedly until USB CONNECT is highlighted.
- C. Press the **Power/Menu** button to make adjustments to the USB CONNECT setting.

USB CONNECT SETTINGS

YES: When YES is selected, you can connect your Photo Frame to your computer in order to load photos on to your Photo Frame.


NO: When NO is selected, your computer will not recognize your Photo Frame and you will not be able to load photos from your computer.

You can use the **Page Up** or **Page Down** buttons to highlight YES or NO. You can press the **Power/Menu** to enter this setting.

NOTE: The USB CONNECT option must be set to YES in order to load photos from your computer onto your photo frame. When your Photo Frame is connected to your computer, and the USB CONNECT option is properly set, the LCD Screen of your Photo Frame will display "USB CONNECT".

USING DPFMate Software.

Once your Photo Frame is connected to your computer, DPFMate software will automatically start. No additional software disks are needed.

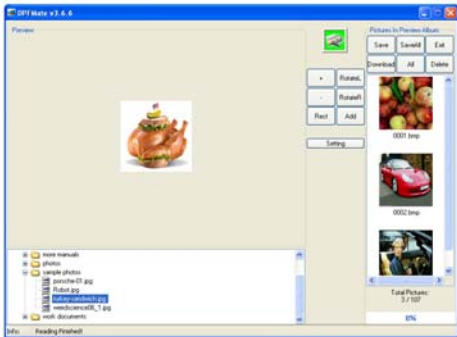

1. In the lower left hand corner of the screen, there is a directory of files and folders on your computer. Find the picture file you would like to load onto your Photo Frame and left click on it with your mouse.

2. You can adjust the appearance of the photo you have selected by clicking on the + (expand), - (contract), RotateL (rotate left), RotateR (rotate right) or RECT buttons. The RECT

button automatically resizes your photo so it will fit in your Photo Frame. After that the RECT button will change to Clear button and when you click Clear button, the photo will get back to its original size.

3. Click on the ADD button to add the photo to the right hand column. All photos listed on the right hand column can be added to your Photo Frame by clicking on the DOWNLOAD button.

In the upper right hand corner of the screen you also have options to SAVE (this saves a selected photo from your Photo Frame to your computer), SAVEALL (this saves all photos on your Photo Frame to your computer), EXIT (this exits the DPFMate program), ALL (this highlights all the photos on your Photo Frame), and DELETE (this deletes any unwanted photos from your Photo Frame).

4. The setting button allows you to change the text color and background color seen on the LCD screen of your Photo Frame.
NOTE: Do not unplug your Photo Frame while photos are being transferred.

FCC Compliance

FCC part 15.19

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC part 15.105

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

GFM Guarantee

If you are not totally satisfied with this GFM product, you may return it to any Meijer store for a full refund within 12 months (365) days of purchase when accompanied by a receipt.

For customer support, please call (866) 845-9436 or go to www.gfmproducts.com.

**Dist. By Wholesale Merchandisers Inc.,
2929 Walker, NW.
Grand Rapids MI 49544
Made in China**